




Since 1983

CHAD-O-CHEF
Lifestyle products



**VENT FREE / FLUELESS
GAS FIREPLACE
INSTALLATION & OPERATING
INSTRUCTION MANUAL**

**Please read these instructions carefully before
installation, use and retain them for future reference**

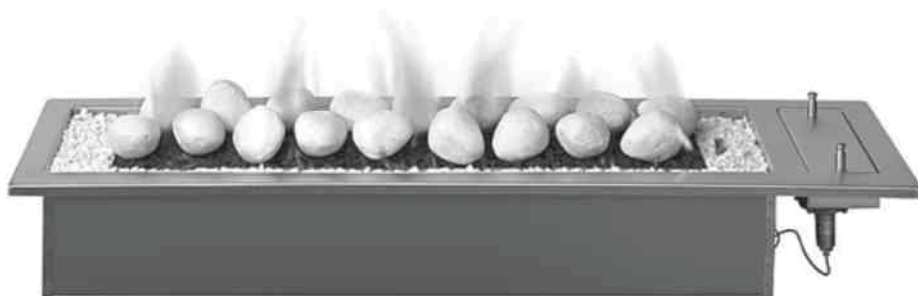

**LP GAS
VFDI 1000**

These appliances conform to the requirements of SANS 1539:2017
LPGSA Permit Number: 1013-41/1-RSA-12-A

•

STYLE SAFETY



CONGRATULATIONS

on your purchase of a

• **CHAD-O-CHEF FIREPLACE** •

and WELCOME to the

CHAD-O-CHEF
family
QUALITY THAT LASTS

TABLE OF CONTENTS

General Instructions and Safety Notes1

Specifications.....2

INSTALLATION REQUIREMENTS.....2

INSTALLATION INSTRUCTIONS.....3

FOR QUALIFIED GAS INSTALLER.....3

NG6801 VALVE: Operating Instructions.....4

NG6801 VALVE: Pressure Testing4

Checklist For Gas Installer5

Caution.....5

Warnings.....6

Cleaning.....7

Servicing.....7

Guarantee Claim Form.....8



<https://app.layerise.com/chad-o-chef>

Scan to register your Drop-In Fireplace online,
for additional benefits.

GENERAL INSTRUCTIONS AND SAFETY NOTES

Thank you for purchasing your new CHAD-O-CHEF Gas Fireplace manufactured to high standards and tested for compliance with SANS 1539:2017

The manufacturer and /or its agents and distributors will not be held responsible for injuries or damages caused by faulty or incorrect installation or use of the appliance.

1. This fireplace provides radiant heat both efficiently and safely, using the latest technology, without the need of a flue. **This appliance consumes oxygen when in use and it is important that it is only used in a well ventilated area, for the efficient performance of the appliance and for the safety of the occupants of the area.**
2. No permanent ventilation is required if the room is 101m³ or larger, but an opening window is required. Should the room size be smaller than 101m³ then permanent ventilation will be required. This volume may include up to 50% of adjacent rooms connected by permanent archways, but not rooms separated by a closable door.
3. **DO NOT** install in a bathroom.
4. **DO NOT** install in a bedroom.
5. Where applicable, the min. free area of ventilation must be 13 cm² per mJ of heat input. The heat input of other gas, wood, coal or paraffin appliances must be included in the calculations. It is the installer's responsibility to do these calculations on behalf of the home owner.
6. **This appliance may only be installed by a registered LP Gas installer and must comply with the installation requirements of SANS 10087-1.** Ask to be shown the installer's card with his registration number, before allowing the installation work to commence and make a note of his QCC number. Upon completion of the installation, the installer is required to explain the operational details of the appliance together with the safety instructions. You will be asked to sign acceptance of the installation and be provided with a completion certificate. You should only sign for acceptance of installation, upon commitment from the installer, that it complies with SANS 10087-1 and is to your satisfaction.
Note that if the guarantee card is not signed by yourself and the installer and returned to the manufacturer, the product guarantee is invalid.
7. On initial light-up of your new fireplace, the "newness" will burn off within the first few hours of operation. During this period some smoke may be emitted from the unit, this should be no cause for concern. Accordingly, the room should be well ventilated with all windows open during this period.
8. Humidity levels will rise with the use of your fireplace, but with the usual dryness of winter, it will surely be welcomed. Should the humidity become overbearing, open the windows for a short period to ventilate the room.

SPECIFICATIONS

Model	VFD1000
Gas type	LPG
Operating pressure	2,8kPa
Min Regulator size to comply with SANS 1237	2 kg/hr
Max. gas consumption	0.75 kg/hr
Max. mJ input	37.5 mJ/hr
Max. kW input	10.6 kW/h
Gas inlet connection	Ø8mm compression
Ignition	Piezo Spark
Oxygen depletion system (Pilot)	ODS min 18.5% O ₂
Coals	22
Pebbles	18
Min Room size without permanent ventilation	101m ³

INSTALLATION REQUIREMENTS

Your VFD1000 Fireplace is designed to **drop into a hole prepared in a masonry construction.**

In order to function correctly the unit needs adequate ventilation holes to be cut into the masonry construction housing the unit (2x 100mm holes). - see diagram on pg.6

Choosing a site:

This fireplace may be installed in any room in a home except in bedrooms or bathrooms where the humidity levels are too high. (See page 1)

Avoid areas where there are strong draughts, which may be generated by outside doors. It is recommend that the fireplace **should not** be installed within 500mm of any air vent, as this could affect the working of the ODS.

Clearances to combustible materials:

Combustible materials are defined as wood, fabrics, or other materials likely to burn when exposed to flame. Any other material which is likely to discolour, melt, or lose shape when exposed to moderate heat, should fall into the same category.

Min clearance to the sides	100 mm
Min clearance to the sides for curtains & fabric	500 mm
Min clearance to the ceiling	800 mm
Min clearance to a floor (including carpet)	100 mm
Min clearance to combustible furniture in front	1000mm

A masonry shelf may be fitted 800mm above the fireplace but under no circumstances should any electrical equipment such as plasma screen TV sets be positioned on the wall above. Any ornaments positioned above the fireplace must be able to withstand the elevated temperatures and moisture. No combustible materials whatsoever must be used or placed above the fireplace.

INSTALLATION INSTRUCTIONS FOR QUALIFIED GAS INSTALLER

Unpacking

Carefully undo strapping to separate loose parts and remove all plastic protective sheeting.

Positioning and Sizing

Confirm that the size of Fireplace chosen is the right size for the room. Build up a masonry platform to the customers design, with a suitable hole to drop the fireplace into, so that it rests on the surrounding rim.

Provide a vent for the primary air to the burner by means of 2x holes, with a minimum size of 100mm², leading into the cavity below the unit.

Connect up according to SANS 10087-1

Connect a copper pipe from the gas supply via a regulator, complying with SANS 1237, to the Ø8 compression fitting on the control valve, taking into account the distance from the gas supply, to calculate the size of the copper pipe.

Setting up

1. Insert the burner with the venturi facing the gas jet, and ensure the burner is seated correctly.
2. Fill the burner with the special **black** radiant ceramic ash or glass chips.
3. Spread the decorative stone or ceramic evenly around the burner.
4. Place the pebbles or coals in a single layer, double row, spread across the burner, allowing about 10mm gaps between them.
5. **Use only the number of pebbles or coals supplied**

Testing and Commissioning

Turn on the gas supply and test for leaks with soapy water.

Ensure that the **WORKING PRESSURE is 2,8 kPa at the control valve.**

See checklist.

Briefing the customer

All instructions must be handed over to the user for safekeeping. Instruct the customer how to turn the gas on and off and how to light and control the fire.

After commissioning the unit the customer should be instructed on the safe use of it and the need for regular servicing. Frequency of service depends on usage, but must be carried out at the first sign of malfunction and at least once in 2 years.

NG6801 VALVE: OPERATING INSTRUCTIONS

The ODS pilot is situated on the side of the burner.

The gas control valve is accessible by removing the side cover, which lifts off.

1. Push in and turn the control knob to the pilot position and hold it there for a few seconds to allow the gas to feed to the pilot.
2. Continue turning anti-clockwise through the PILOT to click at the SPARK position. Ensure that the pilot is lit. If not, return to OFF position and repeat.
3. When the pilot is lit, keep the knob depressed for approximately 10 to 15 seconds.
4. Now release the knob and the pilot should stay alight.
If the pilot is extinguished during use, wait 3 minutes before repeating the ignition procedure.
5. Continue turning the knob anticlockwise to the HIGH position and the main burner should light after a few seconds
6. Select the required HIGH or LOW setting.
7. To turn the fire OFF, depress the knob and turn it clockwise to the OFF position and release. This will extinguish both the main burner and the pilot burner.




NG6801 VALVE: PRESSURE TESTING

1. Access the valve by lifting the fireplace out of its masonry construction.
2. Attach inline "Pressure Test Tee" into main inlet line.
3. Adjust line pressure to correct working pressure, whilst fire is set on high.

The pressure should be according to the data set out in the SPECIFICATIONS. The fireplace is factory set to work at these pressures and any significant variation could indicate a supply problem.

If the pressure is too high or too low, then check the inlet pressure, by the above procedure.

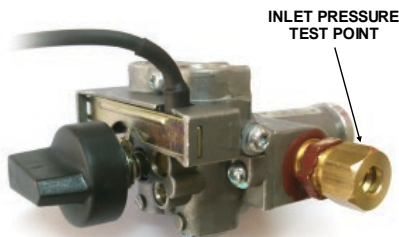

CHECKLIST FOR GAS INSTALLER

Before calling the manufacturer, ensure that all the checkpoints below conform. Refer to the latest SANS 1539:2017 Annex A ,C & E

- ☐ Check there is gas in the gas bottle (if bottle is nearing empty change over to new bottle)
- ☐ Check that the inlet running pressure is 2.8 kPa (whilst running). **If not correct:**
 - ☐ Check that the supply pipe is the correct diameter for the distance covered.
 - ☐ Check that the regulator is functioning correctly.
- ☐ The burner must be correctly positioned and sitting flush on the bottom plate,
- ☐ Jet is centrally aligned with the burner venturi.
- ☐ Check for spider webs in the venturi.
- ☐ The **black** ceramic ash or **Glass** supplied with Chad-O-Chef fireplaces must be inside the burner & the **white** decorative stone (if applicable) surrounding the burner.
- ☐ Ensure that the coals or pebbles supplied by Chad-O-Chef are placed as recommended with a 10mm gap between them.
- ☐ DO NOT use more coals or pebbles than recommended and supplied. (See Page 2)
- ☐ The room must be bigger than the minimum room size for that fireplace. (See Page 2)
- ☐ Ensure that there is adequate ventilation in the box housing the unit. (See Page 1)

CAUTION

Do not tamper with jets, burners or regulator settings. NEVER MODIFY OR BEND THE THERMOCOUPLE TO MAKE THE PILOT STAY ALIGHT. CHAD-O-CHEF products are preset and tested to function efficiently and are approved by the LPGSA.

Should a burn back occur, i.e. the jet catching alight at the entry to the burner with a noticeable loud rushing sound: Turn the gas off immediately and relight after 1 min. If condition persists, contact your gas installer.

Should a leak in the gas be detected, turn off the gas at the gas cylinder, and contact your installer immediately.

Should there be an unexplained shutdown, which could be the result of insufficient oxygen in the room, shut off the gas supply, then open windows and doors in the room, wait 5 min before attempting to restart. If condition persists, contact your gas installer.

WARNINGS

WARNING


This appliance shall **not** be installed in bedrooms or bathrooms.

WARNING

This is an un-vented gas heater. It uses air (oxygen) from the room in which it is installed. Provisions for adequate ventilation must be provided. Refer to appropriate section of the user manual.

WARNING CARBON MONOXIDE POISONING CAN LEAD TO DEATH

Carbon monoxide poisoning: Early signs of carbon monoxide poisoning resemble the flu, with headaches, dizziness or nausea. If you have these signs, the heater may not be working properly. Get fresh air at once. Have the heater serviced. Some people are more affected by carbon monoxide than others. These include pregnant women, people with heart or lung disease or anemia, those under the influence of alcohol, and those at high altitudes.

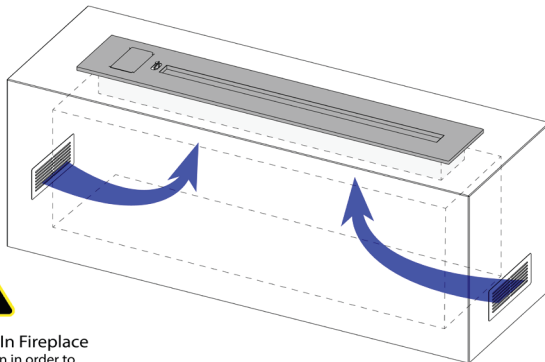

The Chad-O-Chef - Drop-In Fireplace requires sufficient Ventilation in order to function correctly.

Inadequate oxygen supply to the unit will affect the clean burning nature of the fireplace and further, cause the ODS safety System to cut out the gas supply to the unit completely.

CLEANING

Should soot deposits appear on the stainless steel, first clean with a dry cloth when cold, and follow up with a cloth dampened with methylated spirits and a final buffing with a dry cloth. **Do not use an oil based cleaner, as the oil tends to discolour the stainless steel when heated.**

The surrounding fascia may be cleaned with any good stainless steel cleaner, whilst a damp cloth should clean any other surfaces.

SERVICING

Servicing must be carried out by a qualified gas installer.

Frequency of service depends on usage, but must be carried out at the first sign of malfunction and at least once in 2 years.

Spiders are the biggest pests, because they tend to occupy the smallest of holes which will be in the burner venturi or the pilot air holes. If spiders are a problem in the home, have your fireplace serviced just before the new season begins.

Suggested procedure for servicing:

1. Isolate the gas supply and work on a cold unit.
2. Remove the coals or pebbles.
3. Remove the burner and empty the black radiant ceramic ash into a container.
4. Clean the burner and venturi by vacuuming.
5. Remove the surrounding stone or ceramic ash and clean by vacuuming.
6. Inspect the ODS pilot and clean the airways. Check the spark gap.
7. Inspect and clean the main jet
8. Re-assemble the components.
9. Turn on the gas supply and leak test.
10. Check pilot and burner for good ignition.
11. Light the fire and check pressure settings.
12. Check the safe operation of the unit.



CHAD-O-CHEF
Lifestyle products



Chad-O-Engineering (Pty) LTD
Reg. No: 2002/023412/07
Vat Reg No: 4690123031

Tel: +27 11 668 1910/1
Email: sales@chad-o-chef.co.za
www.chad-o-chef.co.za

PO Box 986,
Honeydew,
2040 South Africa

Guarantee Claim Form

The Guarantee given by Chad-O-Engineering (Pty) Ltd covers the working components, on all Chad-O-Chef Gas Fireplaces for the period of 2 Years (+ 1 Year t's & c's apply), covering manufacturing defects caused in the manufacturing process. This does not cover component malfunction if the product is not installed by a registered Gas Installer, or the product is modified after leaving the factory.

Chad-O-Engineering (Pty) Ltd will not be held responsible in the event of rust. Stainless Steel is inherently corrosion resistant when compared to other metals, due to its thin protective surface layer. This does not mean that it is rust-proof & it will require regular maintenance to preserve this protective surface layer in order to enjoy the high-quality standard that is to be expected from Chad-O-Chef.

Read your complete Instruction manual & ensure that you understand it fully. If you have any concerns, please contact our service department for clarity.

Product Name: _____

Serial No: _____

Describe the fault: _____

Contact Details: _____

Please attach a copy of the Gas Installation certificate & invoice and email to: retail@chad-o-chef.co.za



<https://app.layerise.com/chad-o-chef>

Scan to register your Drop-In Fireplace online,
for additional benefits.

Manufactured By:

Chad-o Engineering

PO Box 986 Honeydew 2040

Tel: (011) 668 1910

Email: Sales@chad-o-chef.co.za

www.chad-o-chef.co.za

Version 01